


# Technical reference for small classroom

Inquiry : Nakano Support Desk  
(ext.8072)  
(03-5343-8072)

manuals are on the web site.  
[http://www.meiji.ac.jp/nksd/facility\\_class-info.html](http://www.meiji.ac.jp/nksd/facility_class-info.html)

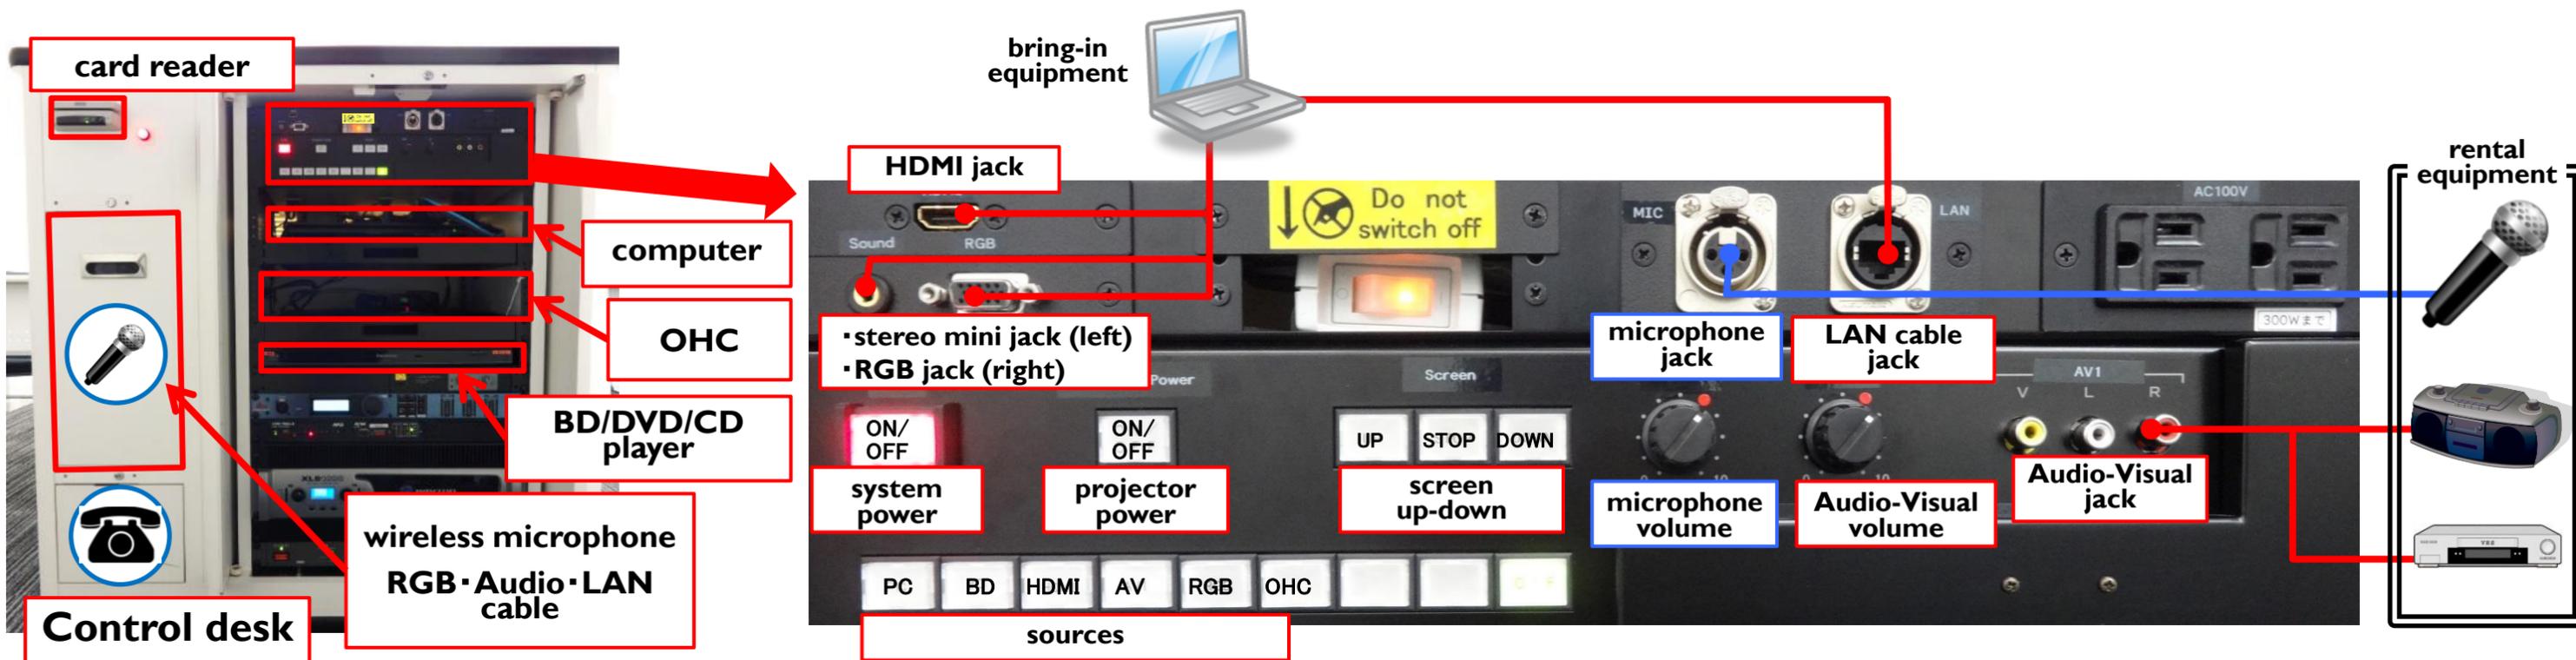

**1** swipe the ID[S] card through the card reader to open the cabinet and turn on the system power.



**2** to project sth onto the screen press [Projector power] button screen comes down automatically.



**3** select the sources which you are using.

name	equipment
PC	computer
BD	BD/DVD/CD player
HDMI	bring-in equipment
RGB	
AV	rental equipment
OHC	OHC

**4** to use bring-in/rental equipment connect with cables below.

- HDMI·RGB·Audio·LAN cables placed in class permanently.
- plug adapter for Apple, and other cables. please borrow from faculty room.



**5** please adjust the Audio-Visual volume knob, before turning on the power of the equipment. 「●」is the standard position.



**6** to adjust the volume for wireless microphone, use [MIC] volume knob. 「●」is the standard position.



**7** After use... please set the volume knob [microphone/Audio-Visual] to a standard position 「●」.



•Close the cabinet and please make sure the cabinet is LOCKED.

**Internet connection need "Kyoutu-Ninsho" System Account (Faculty Number/Password).**



**Troubleshooting**




# troubleshooting...

## Q1 projector screen turn green

### A Turn the switch OFF ⇒ ON

- (1) turn the switch OFF.
- (2) 5sec. later, turn the switch ON.

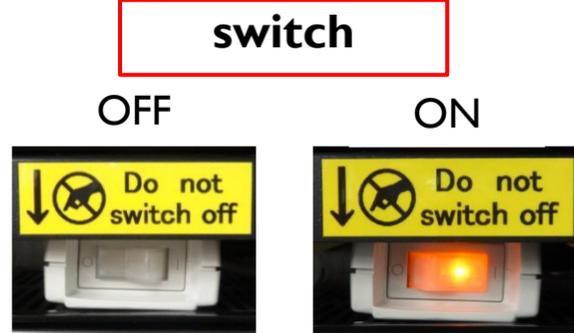

### A If the problem persists, reboot the console system.

- (1) press (a) button. **※After operation, it will take about 5min. for the projector to be available.**
- (2) after (b) button went out, press (a) button to start the console system.
- (3) press (b) button and then select the source button at (c).



## Q2 can't play the media by BD/DVD/CD player

### A Please reinsert the media.

### A 【 If playing CD or DVD 】 use permanent computer.

Inquiry : Nakano Support Desk  
(ext.8072)  
(03-5343-8072)

manuals are on the web site.  
[http://www.meiji.ac.jp/nksd/facility\\_class-info.html](http://www.meiji.ac.jp/nksd/facility_class-info.html)

## Q3 projector won't show on the screen

### A Verify the [ projector power ] switch is turned on (red).


if the light is blinking, the projector is cooling down itself.  
after the light went out, press [ projector power ] button.

### A Try unplugging and plugging the cables.

permanent computer : **HDMI** socket at the left-side of the computer.  
rental/bring-in equipment : both socket at the control panel and the equipment.

### A 【projecting PC】 verify the presentation display mode to [Duplicate]

Windows	Press [Windows logo key] + [P] choose [Duplicate/複製] as below.
Mac	Press[Command] + [F1]

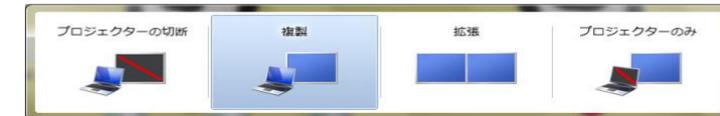

※shortcut keys may varies with keyboard configuration and operating system

### A If the problem persists, try the left-side procedure 【Q1】


## Q4 no sound from the speaker

### A 【wireless microphone】 Verify the tuner power is turned on. and check the [MIC LEVEL] knob is at the 「●」 standard position.



### A Verify the [ amplifier power ] switch is turned on (blue).

if the light is out, press the button.

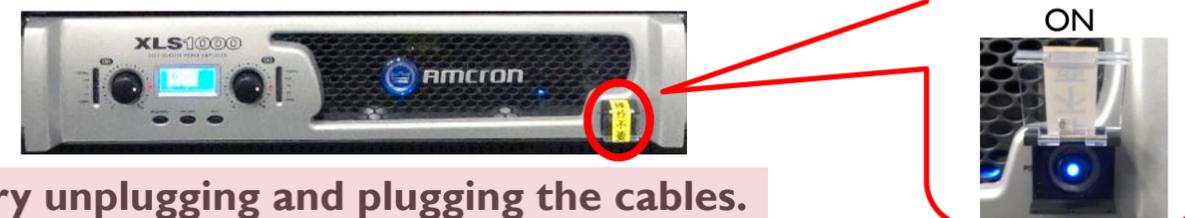

### A Try unplugging and plugging the cables.

permanent computer : **HDMI** socket at the left-side of the computer.  
rental/bring-in equipment : both socket at the control panel and the equipment.

### A If the problem persists, try the left-side procedure 【Q1】

**If the problem persists, please call Nakano Support Desk(ext.8072)**