 


Technical reference for 311 classroom

Inquiry : Nakano Support Desk
(ext.8072)
(03-5343-8072)

manuals are on the web site.
http://www.meiji.ac.jp/nksd/facility_class-info.html

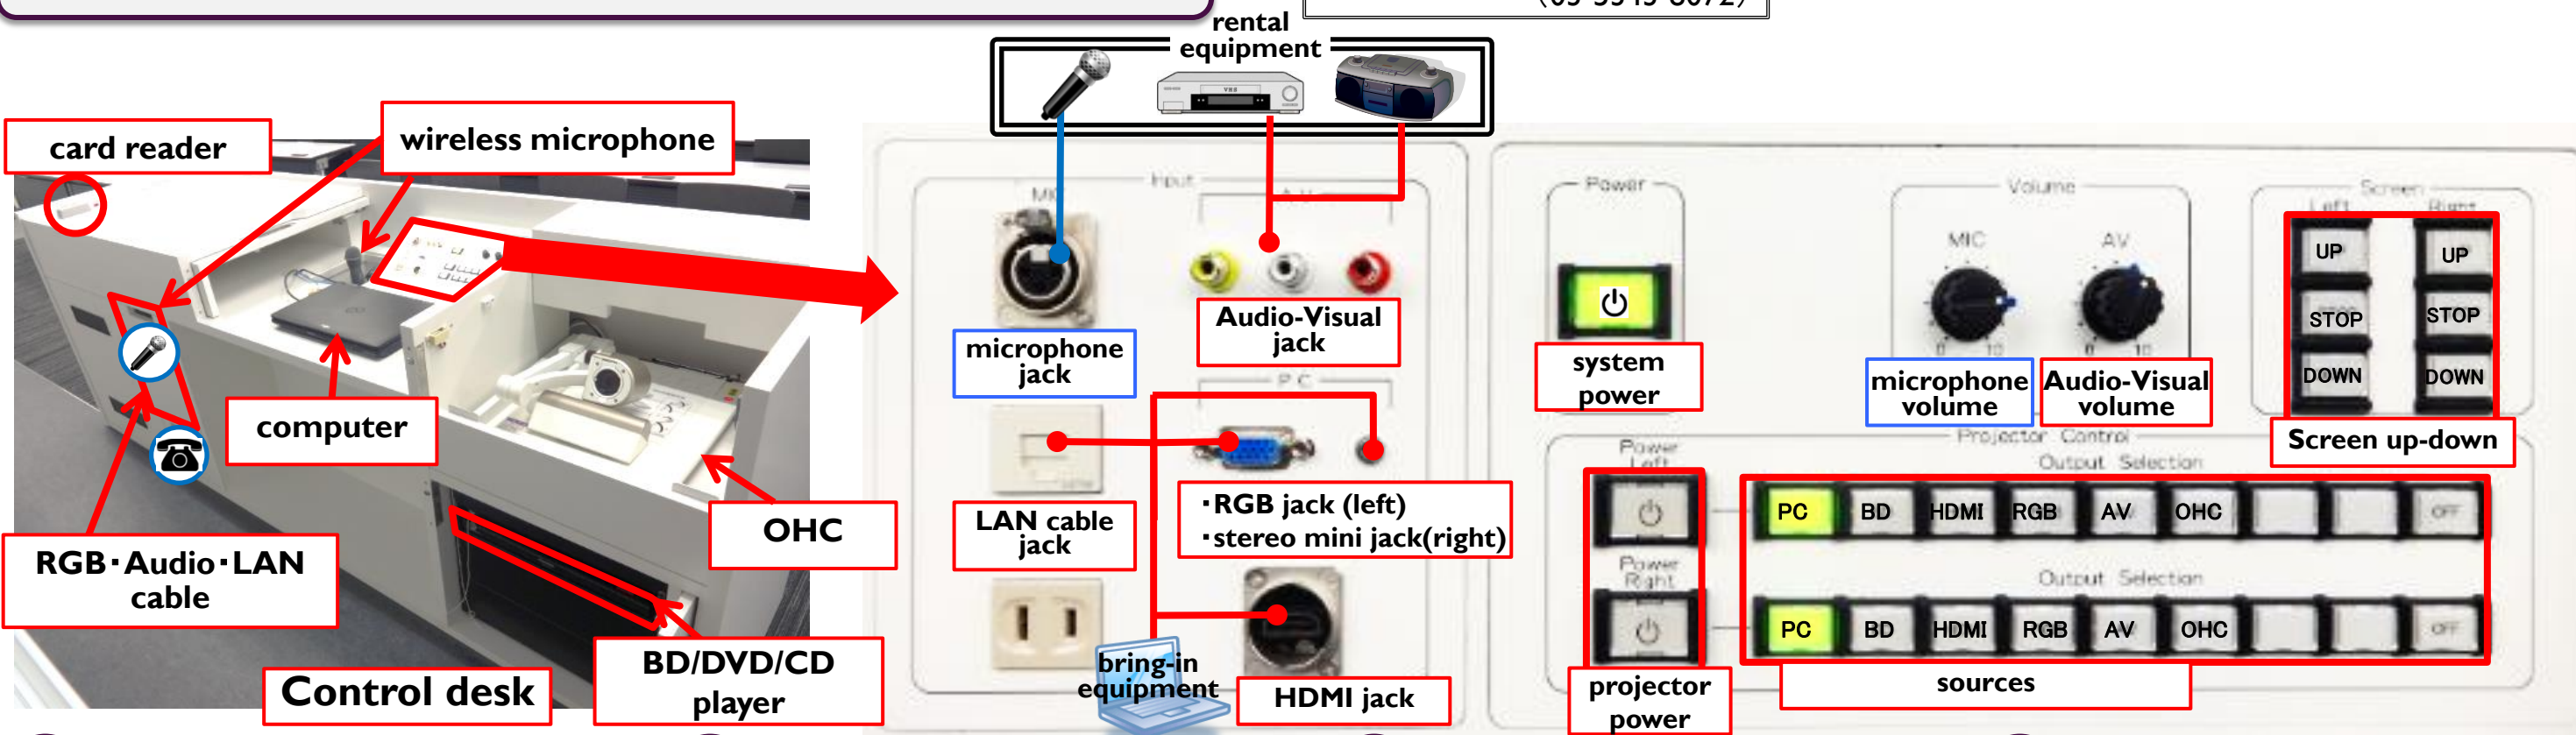

1 swipe the ID[S] card through the card reader to open the cabinet and turn on the system power.

2 to project sth onto the screen press [Projector power] button screen comes down automatically.

3 select the sources which you are using.

name	equipment
PC	computer
BD	BD/DVD/CD player
HDMI	bring-in equipment
RGB	bring-in equipment
AV	rental equipment
OHC	OHC

4 to use bring-in/rental equipment connect with cables below.

- HDMI•RGB•Audio•LAN cables placed in class permanently.
- plug adapter for Apple, and other cables. please borrow from faculty room.

5 please adjust the Audio-Visual volume knob, before turning on the power of the equipment. 「●」is the standard position.

6 to adjust the volume for wireless microphone, use [MIC] volume knob. 「●」is the standard position.

7 After use... please set the volume knob [microphone/Audio-Visual] to a standard position 「●」

- Close the cabinet and please make sure the cabinet is LOCKED.

Internet connection need "Kyoutu-Ninsho" System Account (Faculty Number/Password).

Troubleshooting

troubleshooting...

 
Inquiry : Nakano Support Desk
(ext.8072)
(03-5343-8072)

manuals are on the web site.
http://www.meiji.ac.jp/nksd/facility_class-info.html

Q1 can't open the cabinet's slide

A Try reopening the cabinet door.

- ① Push the slide door against right hand side
- ② swipe the ID [S] card through the card reader.

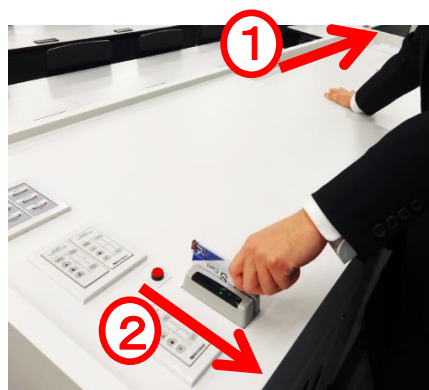

Q2 projector won't show on the screen

A Verify the [projector power] switch is turned on (red).


if the light is blinking, the projector is cooling down itself.
after the light went out, press [projector power] button.

A Try unplugging and plugging the cables.

permanent computer : **HDMI** socket at the left-side of the computer.
rental/bring-in equipment : both socket at the control panel and the equipment.



A [projecting PC] verify the presentation display mode to [Duplicate]

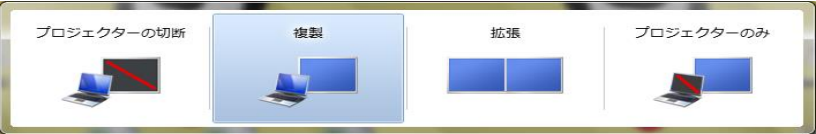Windows	Press [Windows logo key] + [P] choose [Duplicate/複製] as below. 
Mac	Press [Command] + [F1]

※shortcut keys may varies with keyboard configuration and operating system

A If the problem persists, try the right-side procedure [Q5]

Q3 no sound from the speaker

A Try unplugging and plugging the cables.

permanent computer : **HDMI** socket at the left-side of the computer.
rental/bring-in equipment : both socket at the control panel and the equipment.

A If the problem persists, try the procedure [Q5]

Q4 can't play the media by BD/DVD/CD player

A please reinsert the media.

A [If playing CD or DVD] use permanent computer.

 
Q5 If the problem persists

A If the problem persists, reboot the console system.

(1) press (a) button. **※After operation, it will take about 5min. for the projector to be available.**

(2) after (b) button went out, press (a) button to start the console system.

(3) press (b) button and then select the source button at (c).

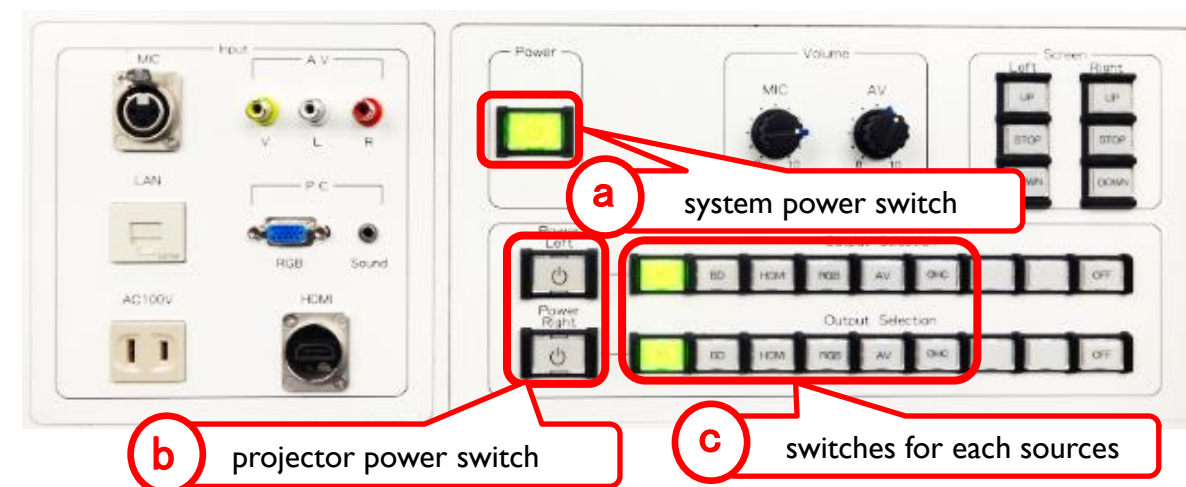

If the problem persists, please call Nakano Support Desk(ext.8072)