


Technical reference for class 306

Inquiry : Nakano Support Desk
(ext.8072)
(03-5343-8072)

manuals are on the web site.
http://www.meiji.ac.jp/nksd/facility_class-info.html

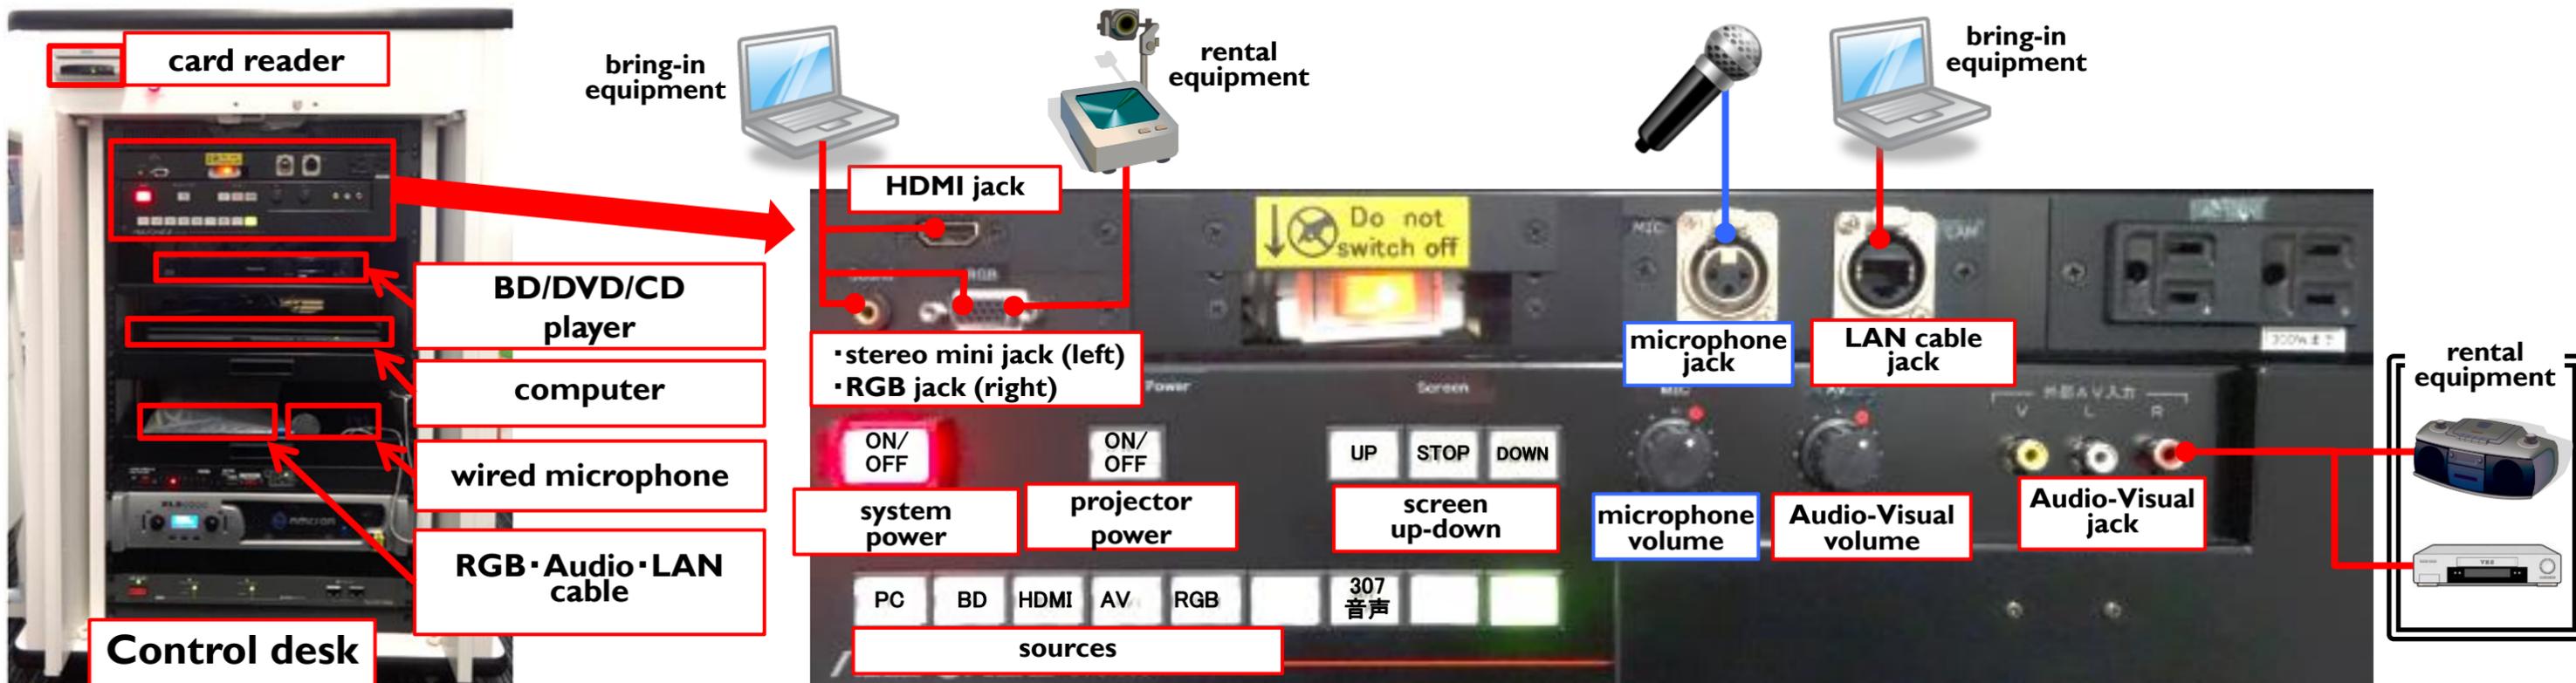

1 swipe the ID[S] card through the card reader to open the cabinet and turn on the system power.

2 to project sth onto the screen press [Projector power] button screen comes down automatically.

3 select the sources which you are using.

name	equipment
PC	computer
BD	BD/DVD/CD player
HDMI	bring-in equipment rental equipment
RGB	
AV	

4 to use bring-in/rental equipment connect with cables below.

- HDMI•RGB•Audio•LAN cables placed in class permanently.
- plug adapter for Apple, and other cables. please borrow from faculty room.

5 please adjust the Audio-Visual volume knob, before turning on the power of the equipment. 「●」is the standard position.

6 to use wired microphone plug in the microphone cable to [microphone jack].

adjust the volume by using mic volume knob 「●」is the standard position.

7 to receive sound from class 307, press [307音声] button.

※while receiving the sound from 307, nothing will show on the screen.

※NOTICE to send the overflow press 「Audio to 306」 at class 307

8 After use... please set the volume knob [microphone/Audio-Visual] to a standard position 「●」.

- Close the cabinet and please make sure the cabinet is LOCKED.

Troubleshooting

troubleshooting...


Inquiry : Nakano Support Desk (ext.8072)
(03-5343-8072)

manuals are on the web site.
http://www.meiji.ac.jp/nksd/facility_class-info.html

Q1 projector screen turn green

A Turn the switch OFF ⇒ ON

- (1) turn the switch OFF.
- (2) 5sec. later, turn the switch ON.

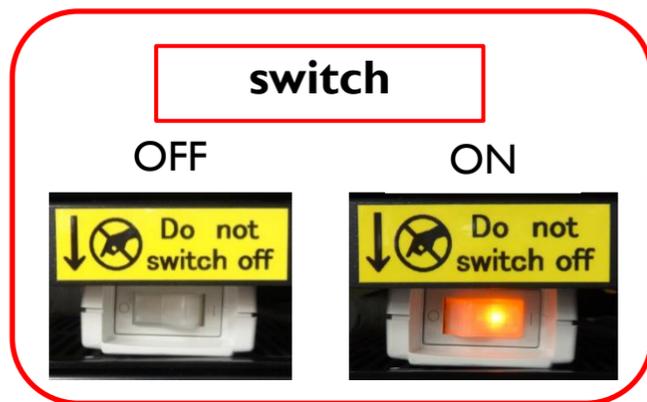

A If the problem persists, reboot the console system.

- (1) press (a) button. **※After operation, it will take about 5min. for the projector to be available.**
- (2) after (b) button went out, press (a) button to start the console system.
- (3) press (c) button and then select the source button at (c).



Q2 can't play the media by BD/DVD/CD player

A Please reinsert the media.

A [If playing CD or DVD] use permanent computer.

Q3 projector won't show on the screen

A Verify the [projector power] switch is turned on (red).


if the light is blinking, the projector is cooling down itself.
after the light went out, press [projector power] button.

A Try unplugging and plugging the cables.

permanent computer : **HDMI** socket at the left-side of the computer.
rental/bring-in equipment : both socket at the control panel and the equipment.



A [projecting PC] verify the presentation display mode to [Duplicate]

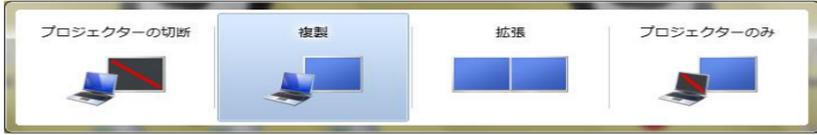Windows	Press [Windows logo key] + [P] choose [Duplicate/複製] as below.
	
Mac	Press [Command] + [F1]


※shortcut keys may varies with keyboard configuration and operating system

A If the problem persists, try the left-side procedure [Q1]

Q4 no sound from the speaker

A Verify the [amplifier power] switch is turned on (blue).

if the light is out, press the button.

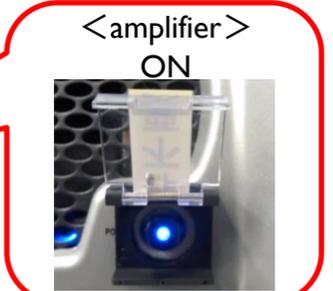

A Try unplugging and plugging the cables.

permanent computer : **HDMI** socket at the left-side of the computer.
rental/bring-in equipment : both socket at the control panel and the equipment.

A If the problem persists, try the left-side procedure [Q1]

If the problem persists, please call Nakano Support Desk(ext.8072)