


Technical reference for class 307

Inquiry : Nakano Support Desk
(ext.8072)
(03-5343-8072)

manuals are on the web site.
http://www.meiji.ac.jp/nksd/facility_class-info.html

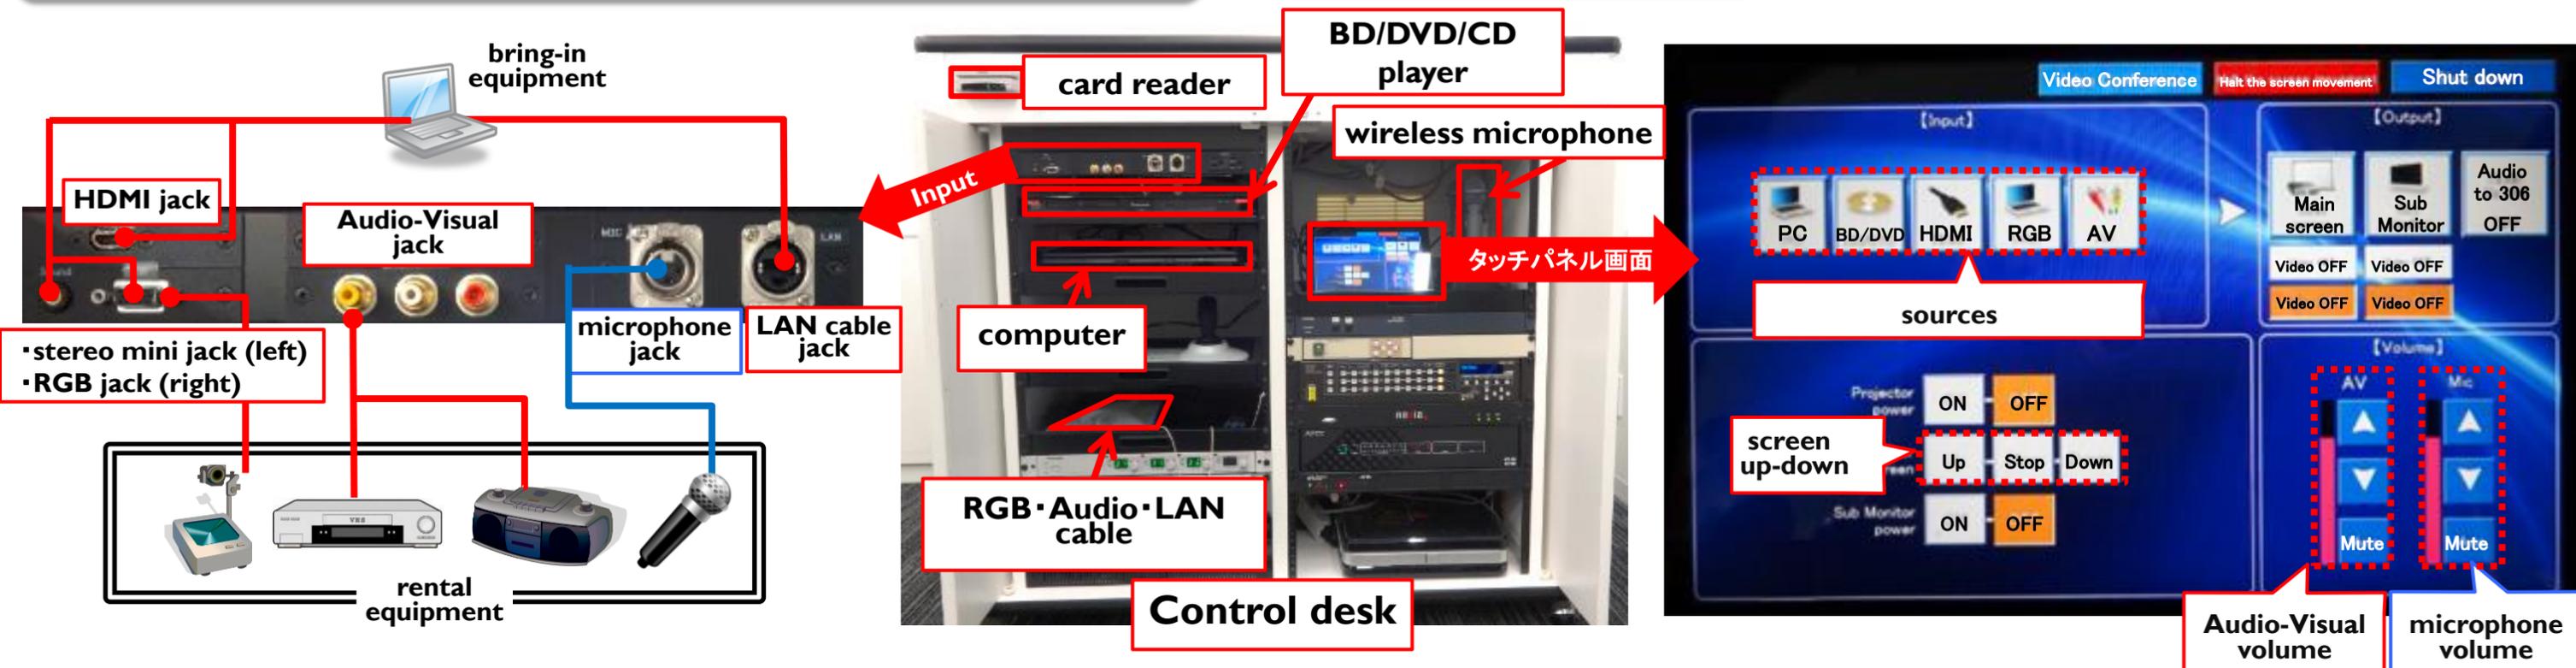

1 swipe the ID[S] card through the card reader to open the cabinet and turn on the system power.



2 select the sources which you are using.

name	equipment
PC	computer
BD	BD/DVD/CD player
HDMI	bring-in equipment rental equipment
RGB	bring-in equipment rental equipment
AV	bring-in equipment rental equipment

3 press [Main screen] button. screen comes down automatically. to roll up the screen, press [Up] button at the [Projector screen].
※「Main screen」means **front screen** and rear **left and right ceiling monitor**




4 to use bring-in/rental equipment connect with cables below.

- HDMI·RGB·Audio·LAN cables placed in class permanently.
- plug adapter for Apple, and other cables. please borrow from faculty room.




5 to adjust the volume, press the button below.

- equipment ⇒ AV「▲」「▼」button
- microphone ⇒ Mic「▲」「▼」button

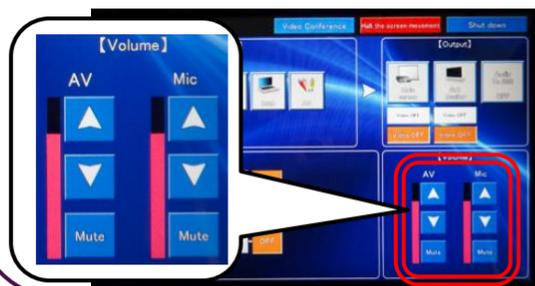

6 to send sound to 306, press 「Audio to 306」 button.

※NOTICE
to receive the overflow press 「307 音声」button at class 306

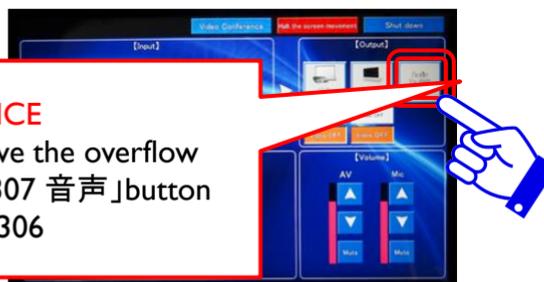

After use...

- Close the cabinet and please make sure the cabinet is LOCKED.



Troubleshooting



troubleshooting...

Inquiry : Nakano Support Desk
(ext.8072)
(03-5343-8072)

manuals are on the web site.
http://www.meiji.ac.jp/nksd/facility_class-info.html

Q1 projector won't show on the screen

A Verify the [projector power] switch is turned on (red).
if the light is blinking, the projector is cooling down itself.
after the light went out, press [projector power] button.



A Try unplugging and plugging the cables.

permanent computer: **HDMI** socket at the left-side of the computer.
rental/bring-in equipment: both socket at the control panel and the equipment.

A [projecting PC] verify the presentation display mode to [Duplicate]

Windows	Press [Windows logo key 田] + [P] choose [Duplicate/複製] as below.
Mac	Press [Command ⌘] + [F1]

※shortcut keys may varies with keyboard configuration and operating system

A If the problem persists, try the right-side procedure [Q4]

Q2 no sound from the speaker

A Verify the [amplifier power] switch is turned on (blue).
if the light is out, press the button.



A Try unplugging and plugging the cables.

permanent computer: **HDMI** socket at the left-side of the computer.
rental/bring-in equipment: both socket at the control panel and the equipment.

A If the problem persists, try the right-side procedure [Q4]

Q3 can't play the media by BD/DVD/CD player

A Please reinsert the media.

A [If playing CD or DVD] use permanent computer.

Q4 If the problem persists

A If the problem persists, reboot the console system.

- (1) press (a) button. **※After operation, it will take about 5min. for the projector to be available.**
- (2) swipe the ID[S] card through the card reader and turn on the system power.
- (3) after projector power lamp turn red, select the source button at (b) and then press (c) button.



If the problem persists, please call Nakano Support Desk(ext.8072)