


プレゼン卓の設備

お問い合わせ先: 和泉サポートデスク(内線3650)

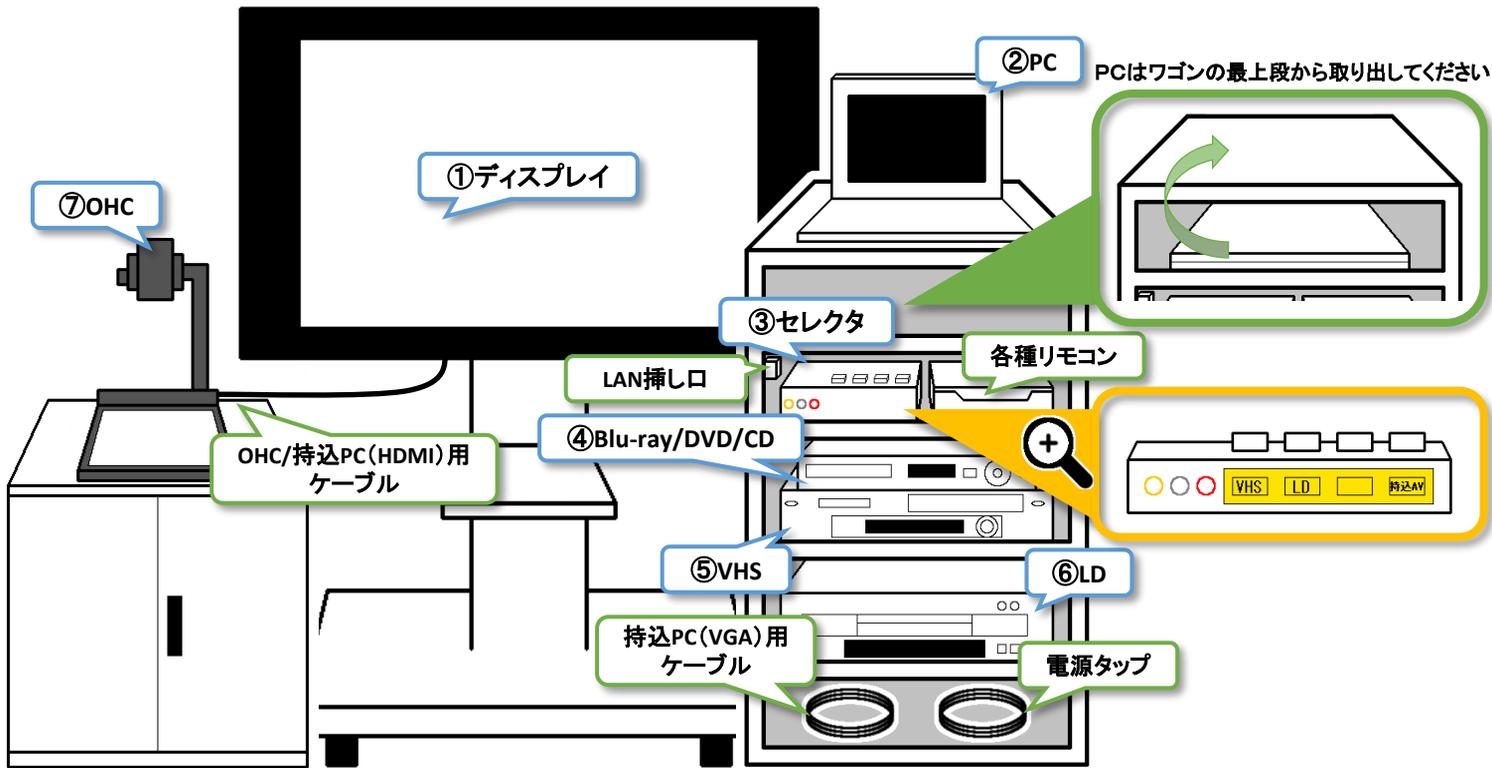

常設PC

手順: ①→②

- ① リモコンでディスプレイの電源を入れ、「入力切替」で「常設PC」を選択する
- ② パソコンを起動する

※インターネット接続には、「共通認証アカウント」(学生番号/教職員番号とパスワード)が必要

持込PC

手順: ①→持込PC

- ① リモコンでディスプレイの電源を入れ、「入力切替」で「持込PC(VGA)」または「OHC/持込PC(HDMI)」を選択する
- 持込PCを起動し、備え付けのVGA・オーディオ・HDMI・LANケーブル等に接続する

※ HDMIをご利用の場合はOHCからHDMIケーブルを挿し変えること

※ケーブルを抜くときはケーブル線ではなく端子を持つこと

Blu-ray/DVD/CD

手順: ①→④

- ① リモコンでディスプレイの電源を入れ、「入力切替」で画面設定を「Blu-ray/DVD」にする
- ④ リモコンで機器の電源を入れ、ディスクをデッキに挿入する

VHS

手順: ①→③→⑤

- ① リモコンでディスプレイの電源を入れ、「入力切替」で画面設定を「VHS/LD/持込AV」にする
- ③ セレクトの「VHS」を選択する
- ⑤ リモコンで機器の電源を入れ、VHSをデッキに挿入する

LD

手順: ①→③→⑥

- ① リモコンでディスプレイの電源を入れ、「入力切替」で画面設定を「VHS/LD/持込AV」にする
- ③ セレクトの「LD」を選択する
- ⑥ リモコンで機器の電源を入れ、LDをデッキに挿入する


プリント、書籍類

手順: ①→⑦

- ① リモコンでディスプレイの電源を入れ、「入力切替」で画面設定を「OHC/持込PC(HDMI)」にする
- ⑦ OHC(教材提示装置)の電源を入れ、起動したら投影物を置く

Classroom equipment

For support: Izumi Support Desk (ext. 3650)

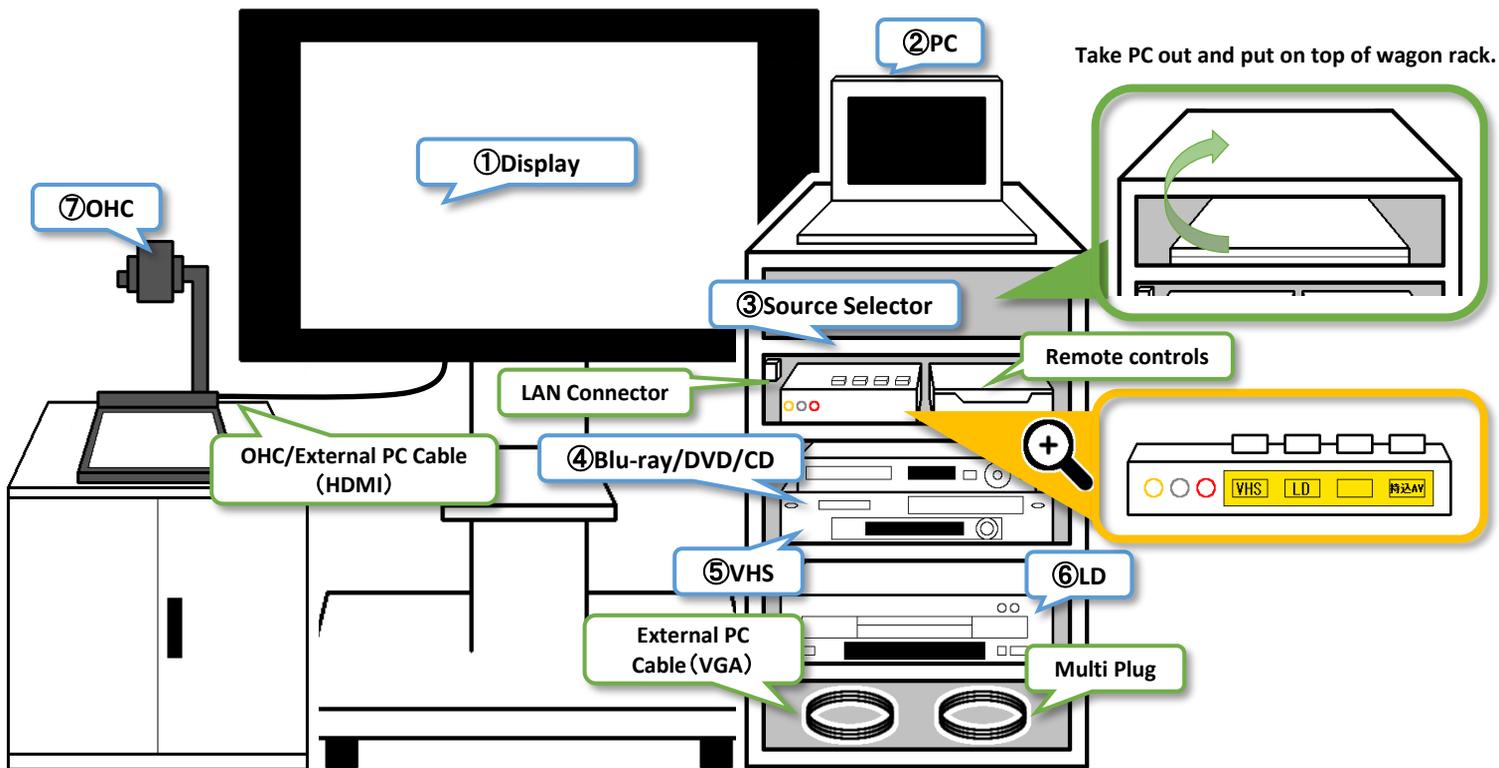

Classroom PC

Sequence: ①→②

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「常設PC」 (Classroom PC)

② Start PC

※ Common Authentication Account (student/teacher ID and password) is required to use the Internet.

External PC

Sequence: ①→External PC

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「持込PC (VGA)」 or 「持込PC (HDMI)」

○ Start your PC and connect cables (VGA, Audio, HDMI, LAN). Switch your PC to duplicate mode etc. if necessary.

※ To use HDMI cable, disconnect in from OHC.

※ When disconnecting cable, please grip tightly its plug to prevent port from dislodging.

Blu-ray/DVD/CD

Sequence: ①→④

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「Blu-ray/DVD」

④ Turn Blu-ray player on by remote control and insert disk

LD

Sequence: ①→③→⑥

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「VHS/LD/持込 (External) AV」

③ Press 「LD」 on selector

⑥ Turn LD player on by remote control and insert disk

VHS

Sequence: ①→③→⑤

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「VHS/LD/持込 (External) AV」

③ Press 「VHS」 on selector

⑤ Turn VHS player on by remote control and insert videotape

Printed materials

Sequence: ①→OHC (OHC=Document Camera)

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「OHC/持込PC (HDMI)」

○ Start OHC and place printouts under camera

You can borrow AV Equipment Rack key in Teachers' Waiting Room (Media Bldg. 1F) or Academic Affairs Office (Bldg. No. 1, 1F, Counter No.9).