


# プレゼン卓の設備

お問い合わせ先: 和泉サポートデスク(内線3650)

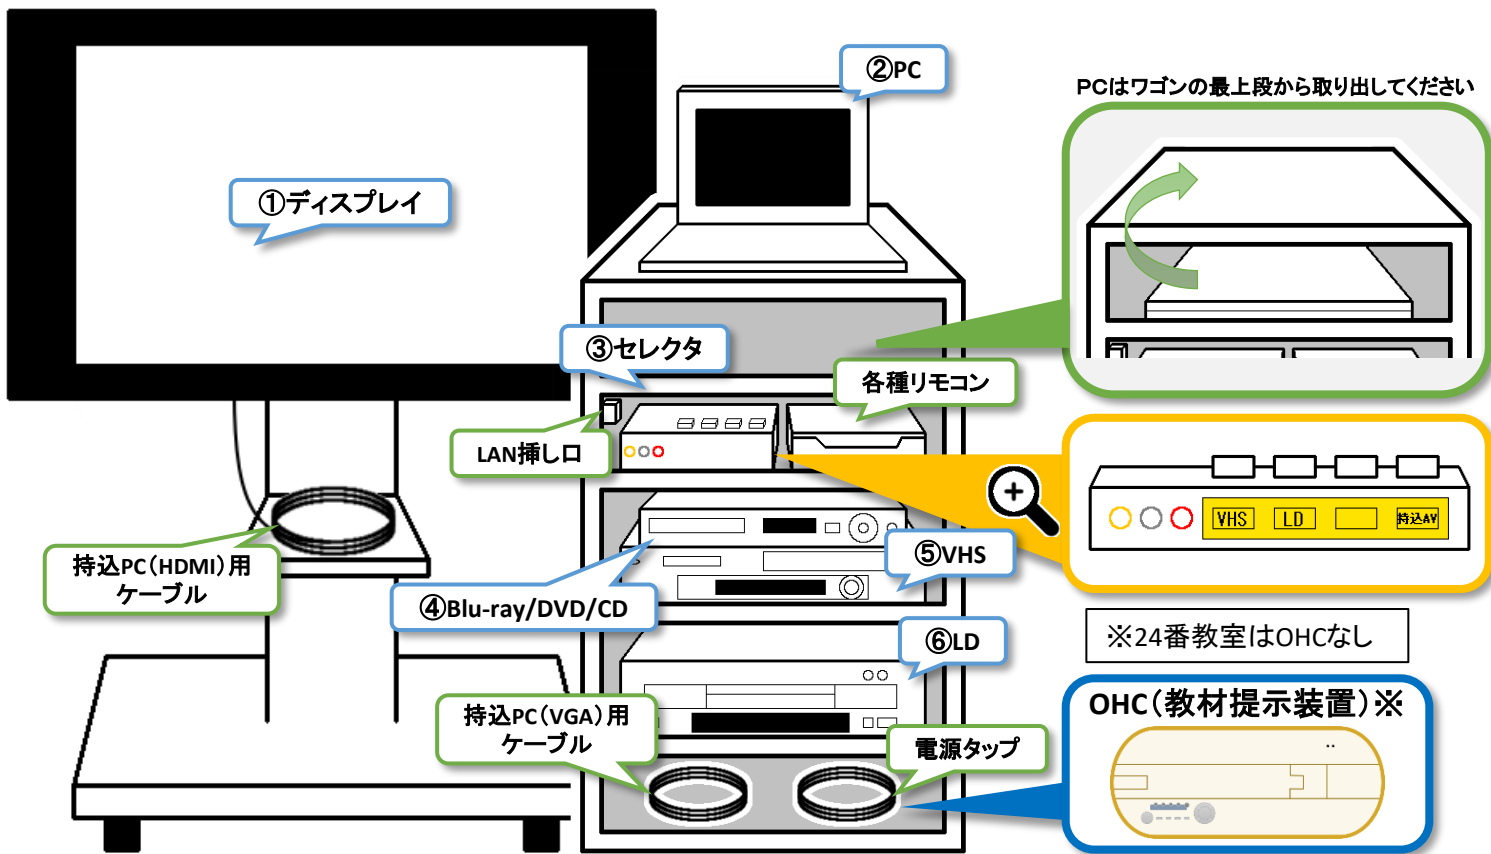

## 常設PC

### 手順: ①→②

- ①リモコンでディスプレイの電源を入れ、「入力切替」で「常設PC」を選択する
- ②パソコンを起動する

※インターネット接続には、「共通認証アカウント」(学生番号/教職員番号とパスワード)が必要

## 持込PC

### 手順: ①→持込PC

- ①リモコンでディスプレイの電源を入れ、「入力切替」で「持込PC(VGA)」または「持込PC(HDMI)」を選択する
  - 持込PCを起動し、備え付けのVGA・オーディオ・HDMI・LANケーブル等に接続する
- ※ケーブルを抜くときはケーブル線ではなく端子を持つこと

## Blu-ray/DVD/CD

### 手順: ①→④

- ①リモコンでディスプレイの電源を入れ、「入力切替」で「Blu-ray/DVD」を選択する
- ④リモコンで機器の電源を入れ、ディスクをデッキに挿入する

## VHS

### 手順: ①→③→⑤

- ①リモコンでディスプレイの電源を入れ、「入力切替」で「VHS/LD/持込AV」を選択する
- ③セレクトの「VHS」を選択する
- ⑤リモコンで機器の電源を入れ、テープをデッキに挿入する

## LD

### 手順: ①→③→⑥

- ①リモコンでディスプレイの電源を入れ、「入力切替」で「VHS/LD/持込AV」を選択する
- ③セレクトの「LD」を選択する
- ⑥リモコンで機器の電源を入れ、LDをデッキに挿入する


## プリント、書籍類

### 手順: ①→OHC

- ①リモコンでディスプレイの電源を入れ、「入力切替」で「持込PC(VGA)」を選択する
- OHC(教材提示装置)のアームを上げ、持込PC用のVGAケーブルを接続して電源を入れ、投影物を置く

# Classroom equipment

For support: Izumi Support Desk (ext. 3650)

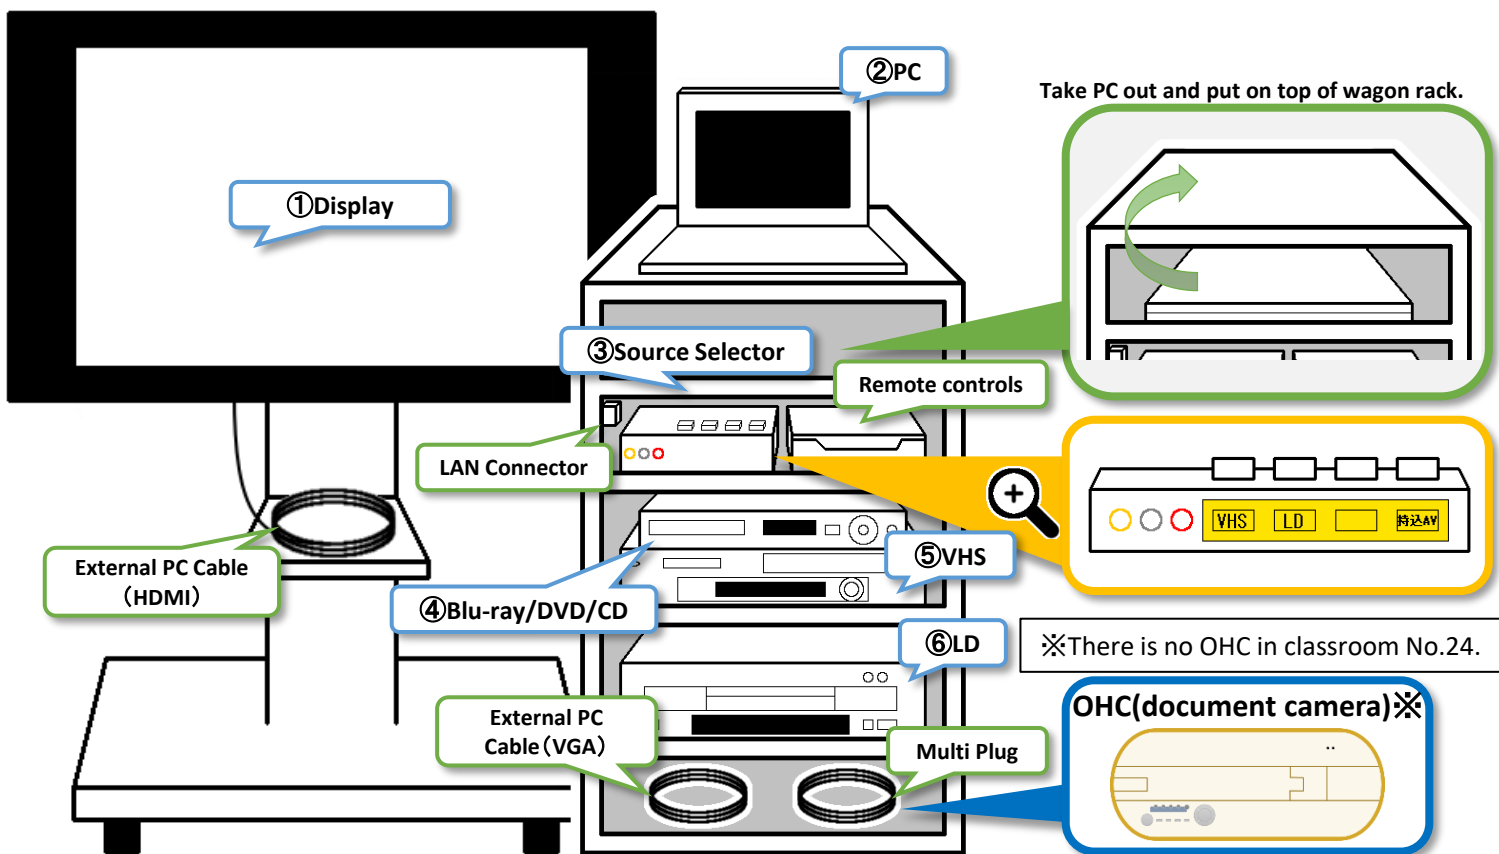

## Classroom PC

### Sequence: ①→②

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「常設PC」 (Classroom PC)

② Start PC

※ Common Authentication Account (student/teacher ID and password) is required to use the Internet.

## External PC

### Sequence: ①→External PC

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「持込PC (VGA)」 or 「持込PC (HDMI)」

○ Start your PC and connect cables (VGA, Audio, HDMI, LAN).

Switch your PC to duplicate mode etc. if necessary.

※ When disconnecting cable, please grip tightly its plug to prevent port from dislodging.

## Blu-ray/DVD/CD

### Sequence: ①→④

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「Blu-ray/DVD」

④ Turn Blu-ray player on by remote control and insert disk

## LD

### Sequence: ①→③→⑥

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「VHS/LD/持込 (External) AV」

③ Press 「LD」 on selector

⑥ Turn LD player on by remote control and insert disk

## VHS

### Sequence: ①→③→⑤

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「VHS/LD/持込 (External) AV」

③ Press 「VHS」 on selector

⑤ Turn VHS player on by remote control and insert videotape

## Printed materials ※

### Sequence: ①→OHC

(OHC=Document Camera)

① Turn display on and press 「入力切替」 (Input Changeover) on TV remote control. From menu displayed select 「持込PC (VGA)」

○ Connect VGA Cable for External PC, raise OHC arm and place printouts under camera